## Macintosh SE 2/40: How To Configure for 2.5MB RAM

Article Created: 29 November 1988
Article Change History
9/15/92 - REVIEWED  • For technical accuracy.
TOPIC
How do I configure a Macintosh SE for 2.5MB of RAM? I've heard there's a jumper on the logic board that needs to be removed.
DISCUSSION
To properly configure the Macintosh SE $2/40$ (or any Macintosh SE with a RAM configuration jumper labeled " $2/4\text{MB}$ to $1\text{MB}$ ") for $2.5\text{MB}$ , the jumper must be completely removed.
Apple suggests leaving the jumper connected to one pin so that it is available for future upgrades.
NOTE: The RAM configuration for the Macintosh SE 2/40 is the OPPOSITE of previous Macintosh SE and Macintosh Plus systems. The highest capacity SIMMs occupy sockets 3 and 4 on the newer boards with the jumper RAM configuration. Older boards with the solder configuration require the highest capacity SIMMs to occupy sockets 1 and 2. Copyright 1989 Apple Computer, Inc.
Keywords: <none></none>

This information is from the Apple Technical Information Library.

Tech Info Library Article Number: 3479

19960215 11:05:19.00