

## Color OneScanner Dispatcher: Window Doesn't Auto Appear (9/96)

Article Created: 20 September 1996
TOPIC
The Dispatcher window does not necessarily automatically display when OneScanner Dispatcher v2.0 launches. This is different than earlier versions of the Dispatcher. With v2.0 if the Dispatcher window was closed at the time you quit the program, then the Dispatcher window will be closed the next time you launch the application.
DISCUSSION
To display this window, from the Window menu choose Dispatcher or press the command key and 0 (zero not 'oh, this opens the Open File dialog) simultaneously.
Copyright 1996, Apple Computer, Inc.
Keywords: <none></none>
This information is from the Apple Technical Information Library.
19960923 07:56:00.00
Tech Info Library Article Number: 20432