

ImageWriter II: Auto-skipping the perforation

There are two ways to automatically skip the page perforation on the ImageWriter II. The first way turns auto perforation skip off and on for a standard size page:

--To turn auto perforation skip on, type:

PRINT CHR\$(27); "Z"; CHR\$(0); CHR\$(4)

--To turn it off, type:

PRINT CHR\$(27); "D"; CHR\$(0); CHR\$(4)

The second way affords you the benefit of being able to place the auto perforation skip anywhere you wish, allowing you to use shorter paper. For instance, if you have a nine-line page and wish the ImageWriter to print seven lines and then skip two, you would type:

PRINT CHR\$(29); "A@@@@@@@@@@@@@@@@@@@@@@@@@@@

This second, more powerful way is described in seven pages of the ImageWriter II technical reference manual.

NOTE: The second method also works for the regular ImageWriter. Apple Technical Communications

Keywords: <None>

This information is from the Apple Technical Information Library.

19960215 11:05:19.00

Tech Info Library Article Number: 1879