

ImageWriter II: Dip Switch Settings for AppleTalk Card

Article Created: 13 August 1991 Article Last Reviewed: Article Last Updated:
TOPIC
How should the dip switches be set for an ImageWriter II with an AppleTalk card installed?
DISCUSSION
The only switch that needs to be changed is Switch Bank 2, Switch 4. Set it to the on/closed position. Copyright 1991 Apple Computer, Inc.
Keywords: <none></none>
This information is from the Apple Technical Information Library.
19960215 11:05:19.00
Tech Info Library Article Number: 8634